





E82329

2. Renew the front air spring where necessary. For additional information, refer to Range Rover (LM) Workshop Manual Section 60 - FRONT SUSPENSION, Air spring assembly (60.21.01).